 


Auto Set Alarm Clock

Instruction Manual

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your Clock. Please read these instructions and store them in a safe place for future reference.

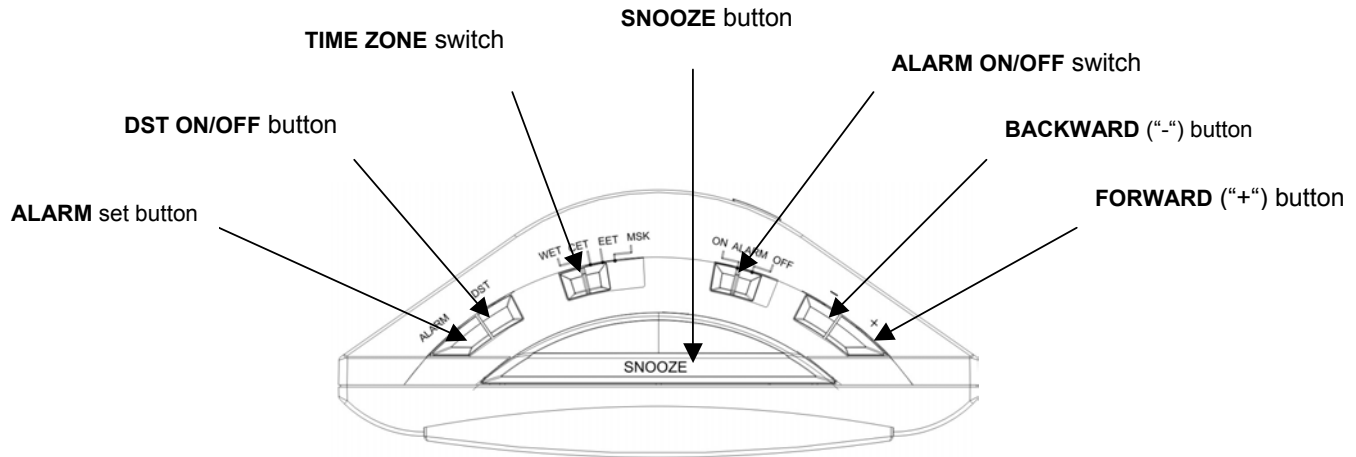

FEATURES:

1. **Auto Set Technology - Plug in and the Clock instantly displays the correct time**
2. **Automatically adjusts Daylight Saving Time (DST)**
3. **Automatically adjusts brightness of blue backlight**
4. **12 hour or 24 hour format selectable**
5. **Alarm with Snooze**
6. **Calendar – Year, Month, date & day**
7. **Four European time zones selectable**

To operate the clock:

When the clock is plugged in, the correct time, month and date will be displayed after a few seconds (e.g. "12 31" means Dec 31). – ***If for any reason this does not happen see section –Trouble Shooting and Extra Features.***

Select the 12 or 24 hour format:

The clock is set to 12-hour format and will indicate PM time as the default. To change to 24 hour format, hold "+" button for 2 seconds, the "24H" icon will be shown on display. Press and hold the "+" button again to switch back to 12hour format.

Setting the Alarm:

To set the alarm, press the "ALARM" button once, press either "+" or "-" button to set the correct hour (Be sure that the AM/PM is correct). Press the Alarm button once again and press either "+" or "-" button to the desired minute. In a few seconds the time will be displayed.

Displaying the Alarm Time:

To display the Alarm time, Press the "ALARM" button once. After a few seconds the time display will reappear.

Operate the Alarm and Snooze: Slide to "ALARM ON" position and the bell icon will appear. The alarm will sound at the desired alarm time. When the alarm sounds, press the "SNOOZE" button to get an extra 10 minutes of sleep (flashing "Zz"). The snooze will be repeated up to four times.

To shut the alarm off: When the alarm sounds press the "SNOOZE" button once and slide to "ALARM OFF" position to disable the alarm. The alarm will sound for 10 minutes and stop automatically if the "SNOOZE" button is not pressed.

Displaying the Year:


To display the year, press "-" button once. After a few seconds the time display will reappear.

If you have any queries, problems or do not understand any part of these instructions, please contact us on the Help line given at the top of the page.

Trouble Shooting and Extra Features

If the time is not automatically displayed when plugged into the AC power:

RESET button inside
button cell compartment

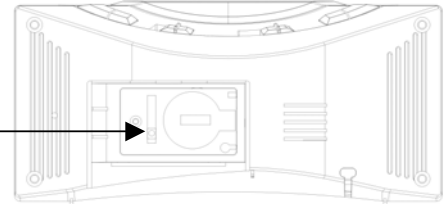


If the display is blank when plugged into the AC power, open the button cell battery compartment and press the Black “RESET” button. In a few seconds, the display will be ON, and show 12:00 (time zone at MSK). Now repeat the procedure to ‘reset the real time’ memory, the time will be automatically stored in the clock.

Resetting the Real Time:

If for some reason the real time is incorrect or lost, press and hold the “ALARM” button for 5-7 seconds, and the year will begin to blink, then press the “+” or “-” button to set the year. Press the “ALARM” again to set the month by pressing the “+” or “-” button. Press the “ALARM” again to set the day, again to set the hour, minute and once more to secure all in the memory.

Auto Set and Real Time Recovery Explained (RTR)

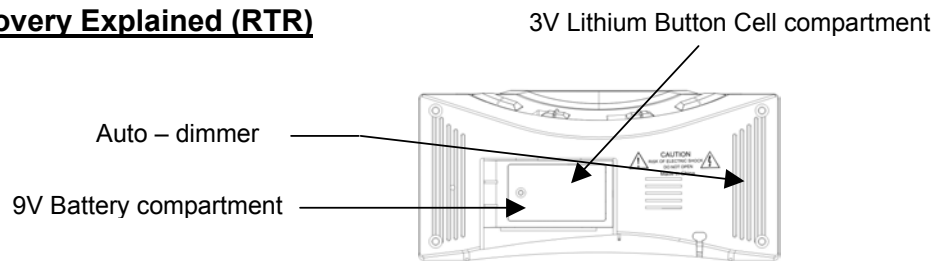

Button cell replacement:

This Alarm Clock is fitted with a button cell battery that will last up to 3 years and maintains the real time. To maintain the real time feature, the button cell battery should be replaced every **3 years** even if the clock is working. The replacement battery is a CR2032 (3V) button cell battery and is available at most electrical stores. We recommend buying the branded CR2032 (lithium) button cell battery (i.e. Maxell, Toshiba, Mitsubishi, Sanyo, Sony & Panasonic etc.). When changing the **RTR battery keep the (“+” polarity upward)**, the **AC power must be on or have a 9V battery installed**. However, if you do lose the Real Time, please use the procedure to reset the real time memory as above.

Alarm Battery backup (Battery not included):

The clock also has an Alarm Back-up Feature. Install a new 9V alkaline battery in the rear compartment using the battery connector. Note this battery can be installed without disconnecting the clock power. If the power fails, the 9V battery back up will automatically continue the alarm operation but the display will disappear. During a power outage, the alarm will sound at the set time. The duration for the battery backup is 12 Hours. When the power is restored the display digits will reappear with the correct time.

Select the time zone:

Slide the time zone switch to display the time in the desired time zone. The default time zone is Western European Time (WET).

See below table:

WET (Western European Time)	Greenwich Mean Time (GMT)
CET	Central European Time GMT +1 hour
EET	Eastern European Time GMT +2 hours
MSK	Moscow Standard Time GMT +3 hours

Setting Daylight-saving Time (DST):

The clock has DST in the ON position as the default. This should be left in the on position so that the clock automatically changes for summer/wintertime. To check the status press “DST” button once, “doF” should appear on screen. If “doF” is displayed press “DST” button again and the display will show “don”.

“doF” = Daylight-saving time off
“don” = Daylight-saving time on

DST Start: Last Sunday in March at 1 am
DST End: Last Sunday in October at 1 am

Light Sensor

The light sensor will automatically dim the display for night time comfort.

If you have any queries, problems or do not understand any part of these instructions, please contact us on the Help line given at the top of the page.





WARNING:

- TO PREVENT FIRE OR SHOCK HAZARD
- DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE
- DO NOT IMMERSE ANY OF THE UNITS IN WATER
- IF YOU HAVE DAMAGED THIS PRODUCT, DO NOT ATTEMPT TO MAKE ANY REPAIRS. PLEASE TAKE THIS UNIT TO A QUALIFIED TECHNICIAN OR THE TECHNICAL SUPPORT FOR ASSISTANCE
- THE VENTILATION SHOULD NOT BE IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS, SUCH AS NEWSPAPERS, TABLECLOTHS, CURTAINS, ETC.

Power Source:

Main Power: AC230V (BS)
Alarm Backup Power: DC9V alkaline battery (Not included)
RTRT Backup Power: DC3V CR2032 lithium button cell (Included)

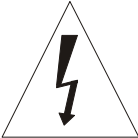Dimensions (L x W x H): 160mm x 57mm x 85mm

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated “dangerous voltage” within the product’s enclosure: that may be of sufficient magnitude to constitute a risk of electric shock to person.	
	The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	



Acctim LTD
Newport Pagnell
MK16 9Q
www.acctim.com